


# Handling Appliances - Basiloid

## Using a Basiloid Attachment

It is critical that the basiloid (appliance handling) attachment is utilized properly. If not used properly, the attachment can cause damage.

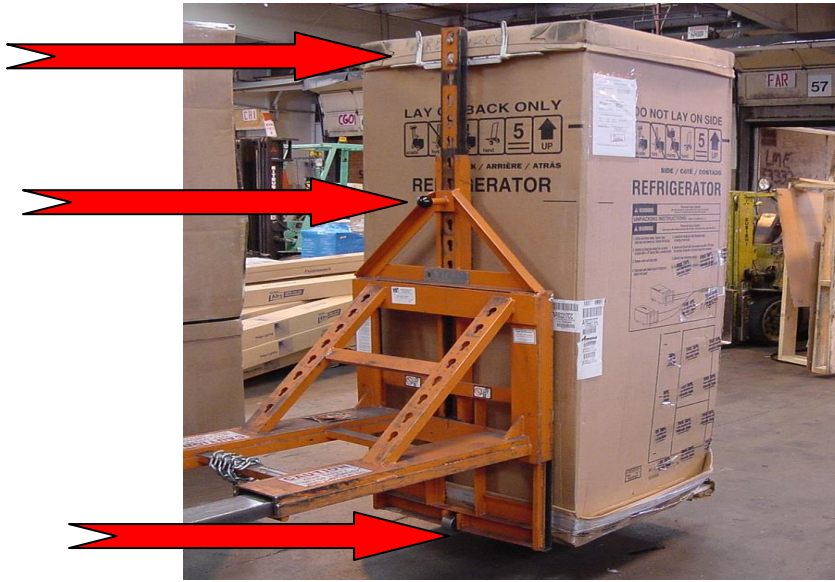

## Proper Handling methods:

1. Carefully line up Basiloid attachment to carton cap.
2. Adjust height of upper slide arm according to height of carton that is being picked up.
3. Attach the drop plate lock to the backside of the center keyhole channel. Position it so as to allow the sliding drop plate to slide at least 2 to 3 inches below the carton you are moving.  
Adjust accordingly to each carton handled.
4. Back up 10 to 15 inches away from other cartons – then tilt forks back slightly to move across dock.
5. Do NOT let drop plate drag across dock or trailer floor.

These steps **MUST** be taken in order to have the proper support on carton. This will prevent damage to product. If drop plate is not adjusted and is pressing against the mid-section of the carton being handled, damage to product is likely.

If your terminal does not have a basiloid attachment, use 2-wheeler to handle appliances. **DO NOT** handle with fork blades.